

[CHECK THAT SEAL]

Keep this notice



Warning : Strap Seal should be examined daily as the Poorly Sealed strap may lead to injury or product damage.

Do not carry the package with Polypropylene strap.

Warning : Turn Main Power Switch off and Unplug from power source before inspecting, cleaning and adjusting this machine.

Caution : Keep away from Heater until it has cooled down completely.

Warning : Failure to follow these instruction may result in personal injury.

Peel off strap joint and Compare with samples below

◎ Good Seal (Photo 1)

- Strap has fibrous appearance where seal was peeled off.
- It requires some strength to peel off.

※ Poor Seal (Photo 2)

- It is easily peeled off.
- * Condition: No fibrous appearance.

Embossed pattern remains relatively unchanged.

Cause 1: Heater Temperature is too low.

<Remedy> Turn Heater Temperature Adjust Dial to a higher setting and retest.

Cause 2: Build-up of strap residue on Heater plate.

<Remedy> Clean Heater plate.

Cause 3: Heater plate is worn-out.

Correct thickness of Heater plate;

RQ-8,AQ-72.2mm JK-2·5,D-53,D55,D56.....1.5mm

7-OL,SS-80.....3.5mm

<Remedy> Replace Heater

Cause 4: Insufficient pressure of Center Block

<Remedy> Replace Center Block Spring.

※ Poor Seal (Photo 3)

- It is easily peeled off.
- * Condition: Deformation of Heated surface.

Cause : Heater Temperature is too high.

<Remedy> Turn Heater Temperature Adjust Dial to a lower setting and retest.

